


USING CD/DVD BURNING TOOL

For using CD/DVD burn tool on the our DVR s/w;

1. Click on '**LOG & ETC**' or '**LOG, BURN**' button on the Main screen(8.0 SW)
Click on '**LOG Viewer & ETC**' or '**LOG, BURN**' button(HD-DVR SW)
2. Will be appearing the Sub button field on to bottom area.
3. Click on the Burning button in the. (Shown below).

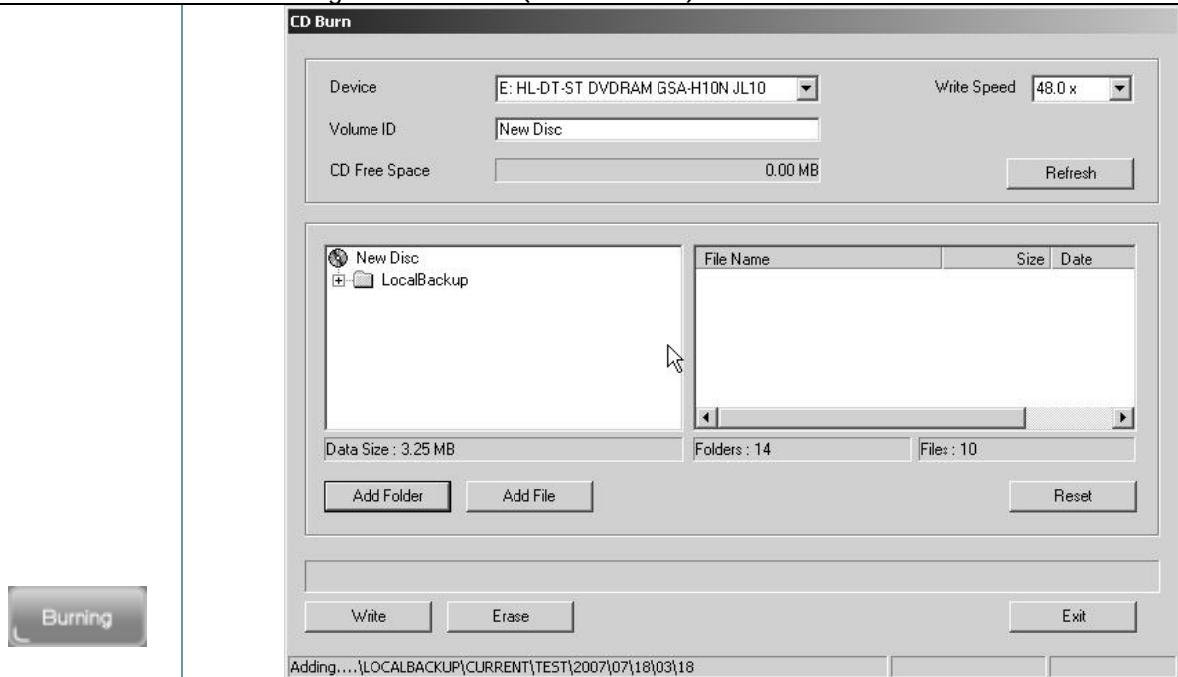

Add

Folder: Adding folder on the CD.

Add File: Select the data for burning.

RESET: Clear added files or folder.

WRITE: Start Burning.

ERASE: Delete the data in CD-RW,DVD-RW media.

Use this button If not want to burning selected data.

EXIT: closing CD burn dialog.


 
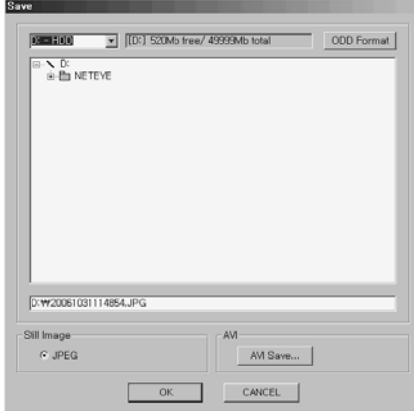

For Burning;

1. Add the folder or files after click on '**Add Folder**' button or '**Add File**' button.
2. Will be display selected folder or files on right side in CD Burn dialog.
3. Click on '**Write**' button, will be starting burning data on to CD or DVD.
4. Click on 'Exit' button after finish burning.


Notice: Check the file size to burn in CD before Burn in CD and burn.


PERFORMING THE EXPORT

STILL IMAGE(JPEG,BMP) FORMAT

Description	Save current image as a bmp or JPEG format to a diskette or destination Drive DISK (including external USB Drive). DVR System can Save a images onto the HDD or FDD, USD HDD, USB stick. Saved JPG format type files have a Watermarking feature.
Step1	 SAVE AS JPEG or SAVE AS AVI will be appear on to drop down menu after clicking on SAVE button. (Shown below).
Step 2	 Clicking on the SAVE as JPEG in the drop down menu.
Step3	<p>Click on the SAVE button after choose the DISK DRIVE and SAVE Folder. (File name is made automatically, but can be changed as user wants.) A tick inside the round indicates JPEG, and then will save the image on to chosen Folder of Drive after click on the OK button.</p>  
Step4	JPEG file copied message will appear after the copy is done.

 AVI VIDEO FORMAT


Description	Save is a way that you can save video the footage to hard drive so it will not be overwritten. You can then save the footage on to a compact disc, or save still images of a particular camera to a floppy disk or compact disk. To save a full motion video file follow the same step, but in the Save as type in drop down box, choose the Save as AVI.
<p>To the save as AVI, do the following:</p>  <ol style="list-style-type: none"> Click on the SAVE button on the SEARCH Window screen. Choose the Save as AVI on the drop down menu.(Shown below) AVI backup dialog will appear. (Shown below) Choose the Camera Channel. Set Start Time and Set End Time. Click on the AUDIO RECORDING for Audio record with image. <ul style="list-style-type: none"> ✓ In the motion recording, audio synchronization with video automatically. Audio Synchronization cannot be perfect. Choose the Media to save, If you need the folder name, fill in the folder name. Click on the Start Recording button, AVI format creating will starting. 	

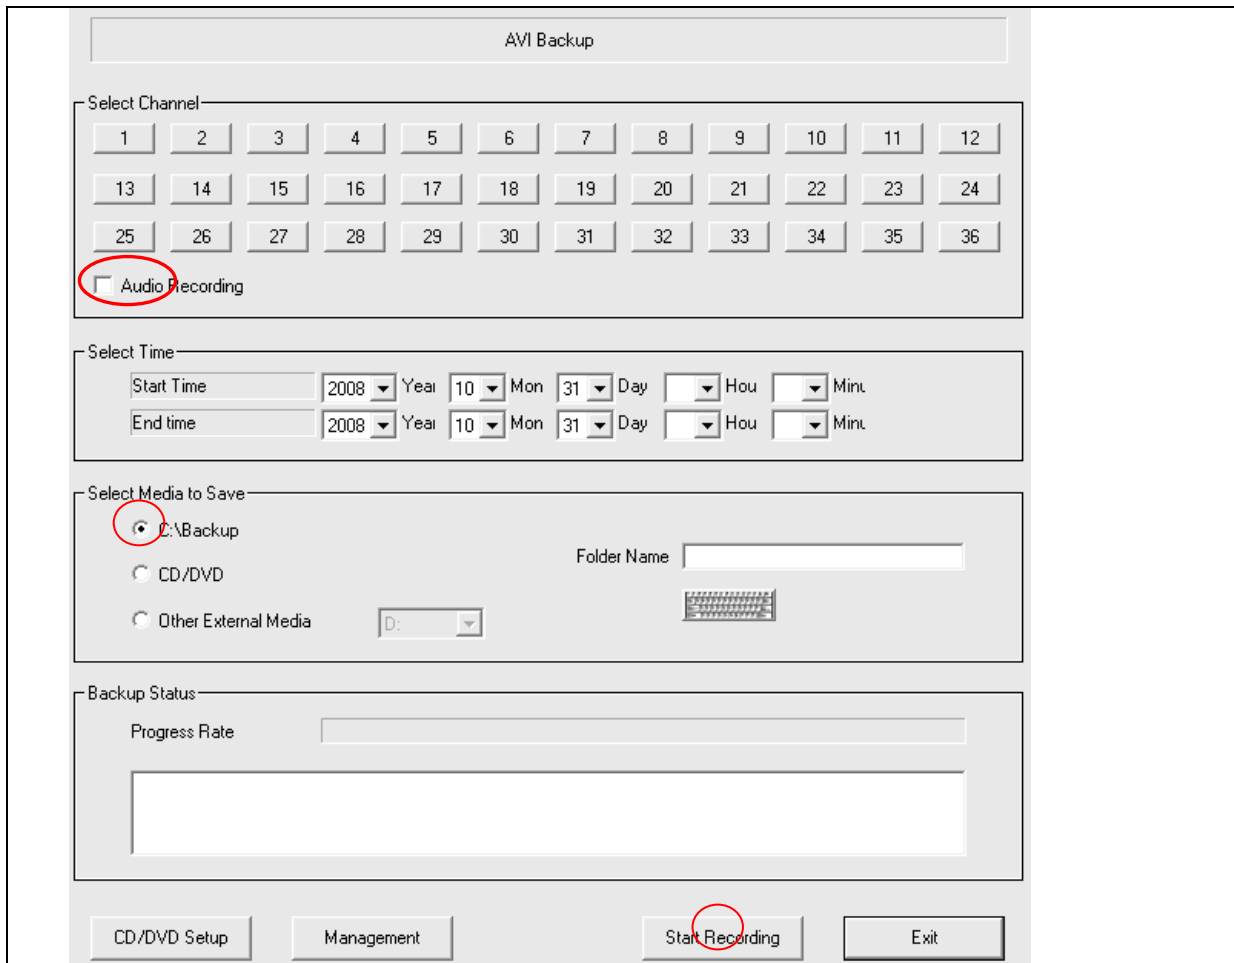

AVI save sequence

Audio Synchronization Function.
 Audio synchronization with Video is done automatically.
 But this is done when at least 1 fps is saved,. So users have to save at least 1 fps.
 So in Motion recording, Audio Synchronization can not be perfect.

Progress rate bar will appear after clicking on the START RECORDING button,
 AVI file (full motion video clip) will save to the chosen folder.

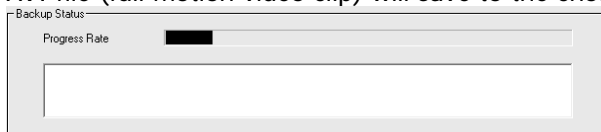

Exit program dialog will be appearing after click on the EXIT button in the AVI Backup dialog.
 Click on the YES button to exit Save as AVI.



[NOTICE]

Backup Media

1.Default: Backup in the root, C:\W_backup in Local HDD(Can be used again)CD/DVD: CD R/RW,DVD R/RW

2. External: Backup in USB external HDD or other external storage.

When users named the folder, all backup files are saved in the <time/date> folder when backup.
 In this <time/date> folder, all backup data are saved as <time/date>.file.

3. When users did not name the folder , <time/date> folder is made and in this all data are saved , all backup data are saved as <time/date>.file.

AVI File Play

Using Window Media Player, users can play backup AVI File just double-clicking when WMP is installed in the system.